


Cat® SlopeAssist Quick Reference

 
Cat SlopeAssist makes grading easy by automatically maintaining a blade angle without the need for an external Laser or GPS reference. This guide describes how to enable the Cat SlopeAssist Basic Mode which allows the operator to enjoy the benefits of Cat SlopeAssist without changing operating style.

If additional assistance is required, press  for the help menu.

Step 1: Enter the Cat SlopeAssist Basic Screen — Press the  Button

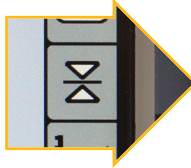

Step 2: Activate Cat SlopeAssist — Press the Yellow Button on the Dozer Control



Step 3: Enjoy Cat SlopeAssist — Run the dozer like you normally would. The blade will automatically maintain the blade angles displayed on the Cat SlopeAssist Basic Screen.

Disable: Cat SlopeAssist — Press the Yellow Button on the Dozer Control



AUTO



OR



Scan with your Smart Phone to view instructional videos or go to www.slopeassist.com and navigate to operator training for more advanced features.